


Quick Installation Guide

150Mbps Wireless N Range Extender

MODEL NO. TL-WA730RE

Package Contents

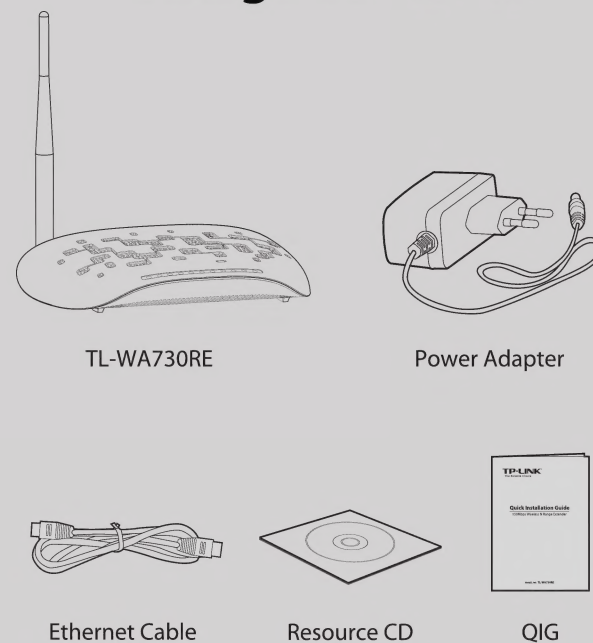


System Requirement

· Windows 7 · Windows Vista · Windows XP · Windows 2000

Method One »»»» Setup by Button

If you want to connect to a secured network, while your Wireless Router doesn't have the **QSS/WPS** button, please refer to **Method two**.

1 Hardware Connection

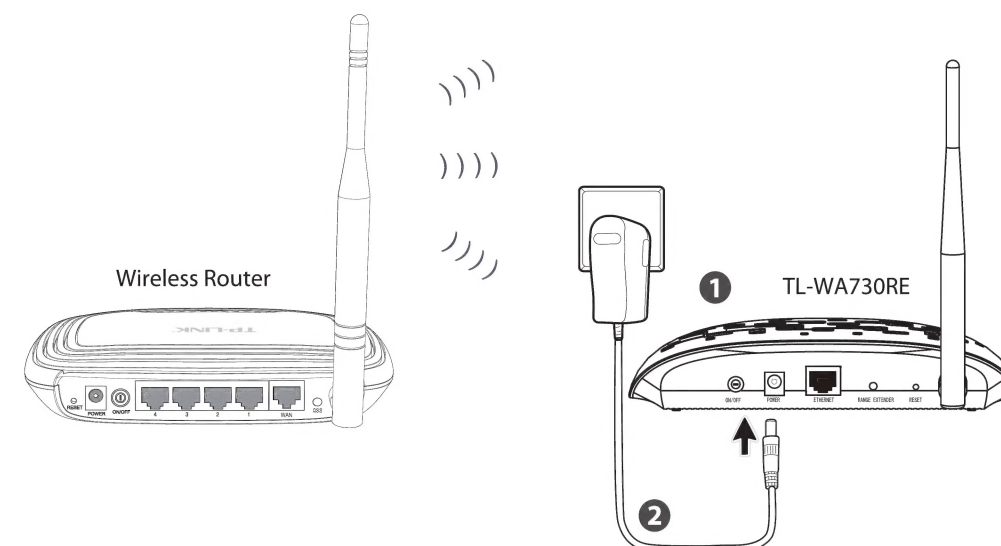


Step 1: Please place your Range Extender **next to** your Wireless Router or Access Point. Here, we take Wireless Router for example.

Step 2: Plug the Power adapter into the power jack of the Range Extender, and the other end to a standard electrical wall socket.


2 Connect to Wireless Network

Connect to the Secured Network


- 1** Push the **QSS/WPS** button on the Wireless Router.

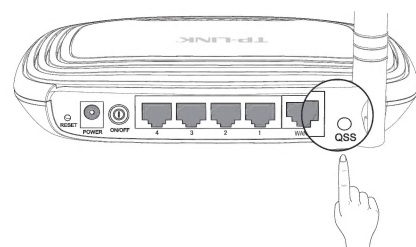

- 2** Press and hold the **RANGE EXTENDER** button on the back panel of TL-WA730RE for about 3 seconds until **RANGE EXTENDER** LED (●) flashes. When the LED becomes solid light, TL-WA730RE has successfully connected to the desired Router.

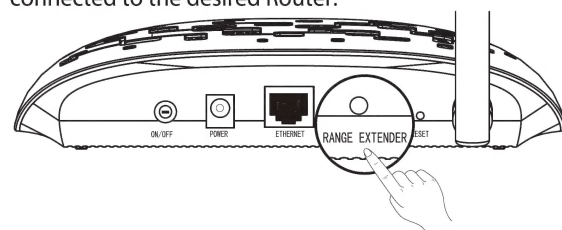


- 3** After successful connection, TL-WA730RE can be placed between the Wireless Router and Wireless Client to boost the signal, but not beyond the coverage of the Wireless Router. **Half-way** between is the ideal location.

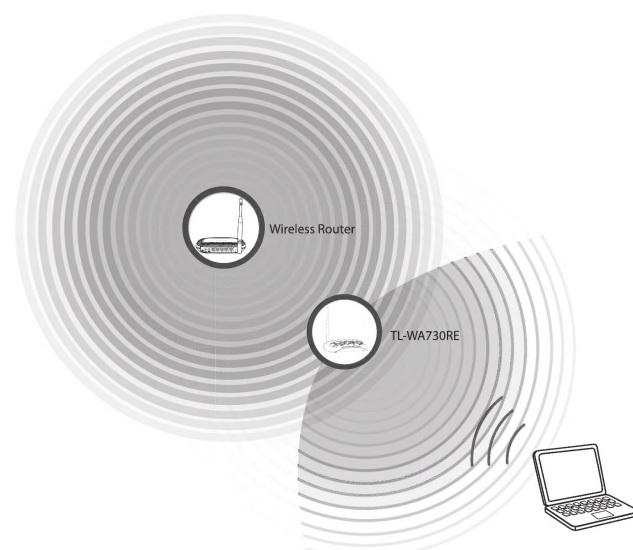


Connect to the Unsecured Network

- 1** Press and hold the **RANGE EXTENDER** button on the back panel of TL-WA730RE for about 3 seconds until **RANGE EXTENDER** LED (●) flashes.

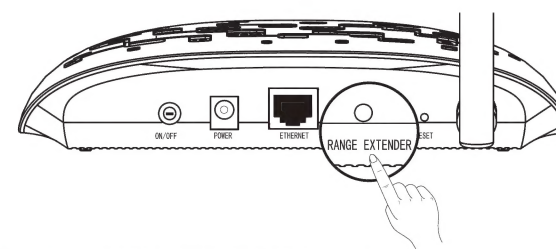


- 2** When **RANGE EXTENDER** LED (●) becomes solid light, TL-WA730RE has successfully connected to the desired Router.

- 3** After successful connection, TL-WA730RE can be placed between the Wireless Router and Wireless Client to boost the signal, but not beyond the coverage of the Wireless Router. **Half-way** between is the ideal location.

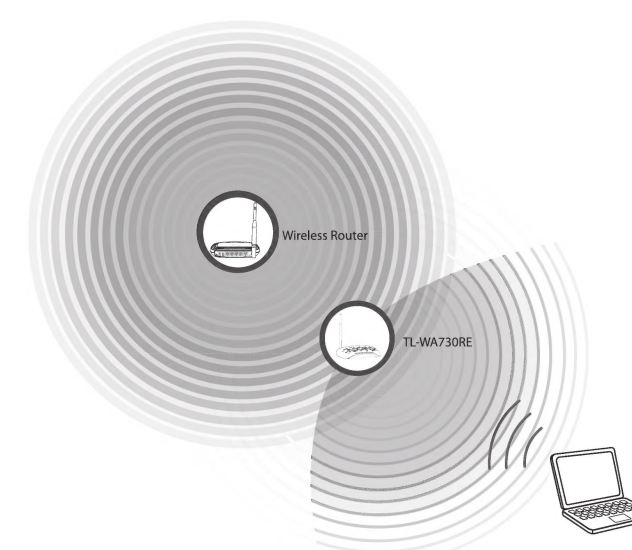

Method Two »»»» Setup by Utility

1 Hardware Connection

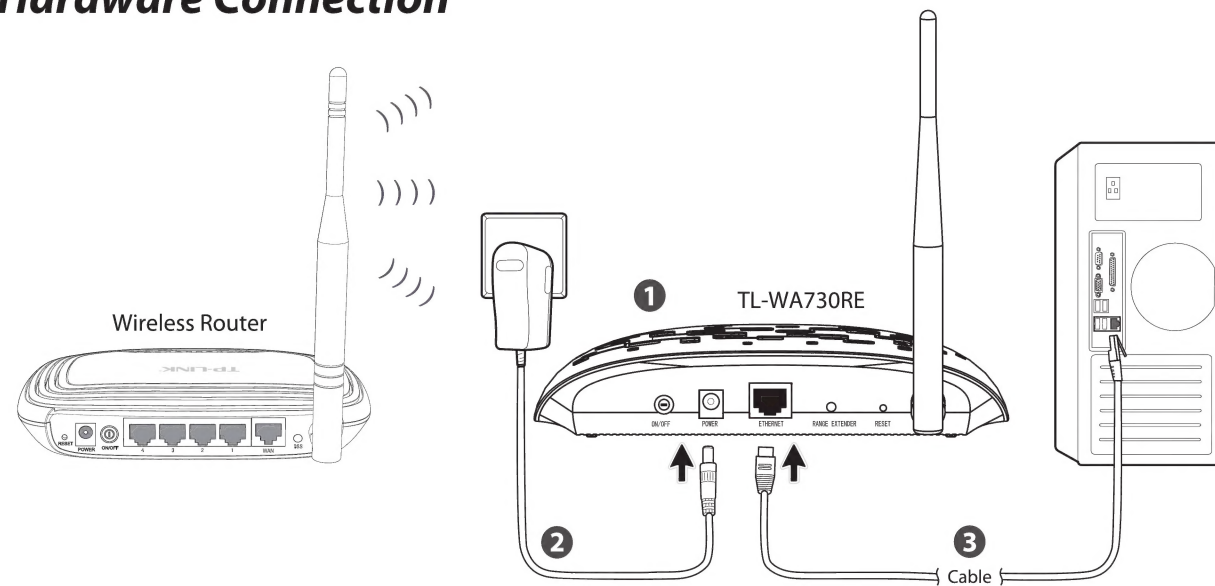


Step 1: Please place your Range Extender **next to** your Wireless Router or Access Point. Here, we take Wireless Router for example.

Step 2: Plug the Power adapter into the power jack of the Range Extender, and the other end to a standard electrical wall socket.

Step 3: Connect the Range Extender to the PC with the Ethernet Cable.

2 Connect to Wireless Network


1 Insert the provided Resource CD into your CD-ROM drive.

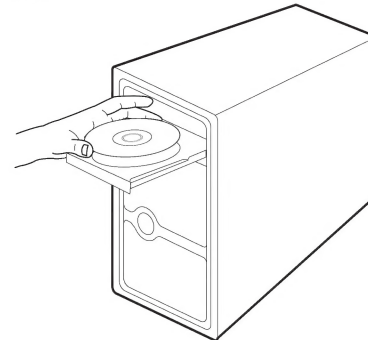


2 The Setup Wizard will automatically pop up on your computer's screen. Please select your product model and click 'Easy Setup Assitant'.




3 After confirming the hardware connection and the status of LEDs, click 'NEXT' to continue.

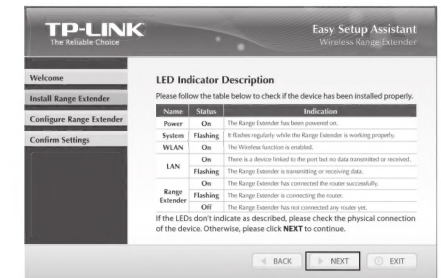



4 Input the IP Address of the Range Extender (the default one is 192.168.0.254). Click 'NEXT' to continue.

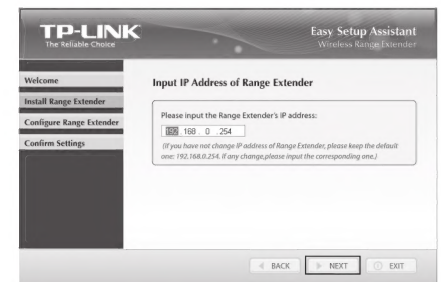


5 When the connectivity is checked successfully, please click 'NEXT'.

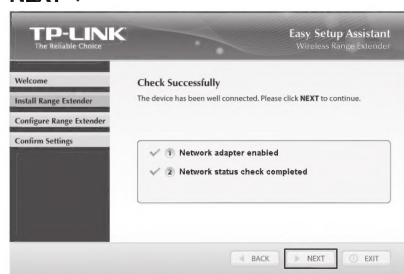


6 The Range Extender can find the Wireless Router automatically. If it is your desired router, please click 'NEXT'. If not, please click 'SCAN' and select your target Router in the list, then click 'NEXT'.

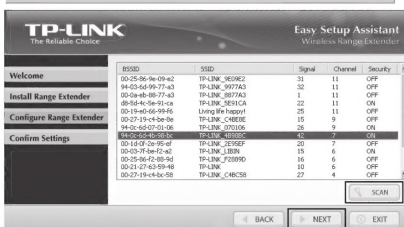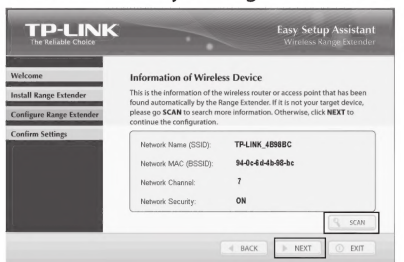


7 Select the same security type and enter the same network key of the Router, then click 'NEXT' to continue.

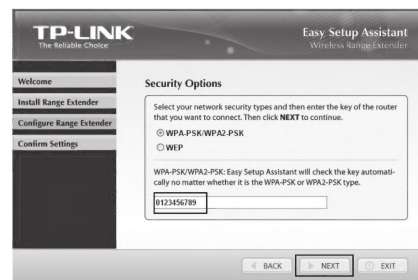

8 After confirming the configurations, click 'NEXT' to continue. If there is any wrong information, please go 'BACK' to reset.

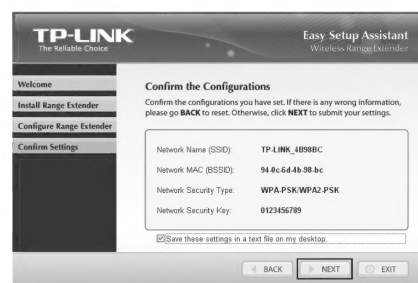


9 When the configuration is completed successfully, please click 'NEXT'.

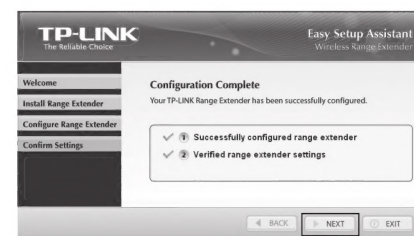

Note During this process, you might see some warnings like "A network cable is unplugged". Please ignore them.

10 Please click 'FINISH' to close this wizard.

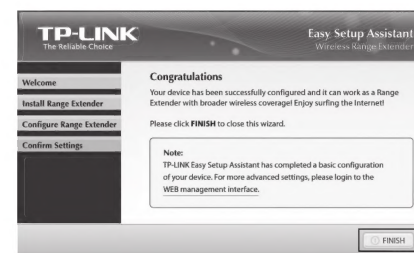

Note For more advanced settings, please refer to the User Guide on the Resource CD.

Technical Support

- For more troubleshooting help, go to www.tp-link.com/en/support/faq
- To download the latest Firmware, Driver, Utility and User Guide, go to www.tp-link.com/en/support/download
- For all other technical support, please contact us by using the following details:
 - Global**
Tel: +86 755 26504400
E-mail: support@tp-link.com
Service time: 24hrs, 7 days a week
 - Singapore**
Tel: +65 62840493
E-mail: support.sg@tp-link.com
Service time: 24hrs, 7 days a week
 - USA/Canada**
Toll Free: +1 866 225 8139
E-mail: support.usa@tp-link.com
Service time: 24hrs, 7 days a week
 - Australia / New Zealand**
Tel: AU 1300 87 5465
NZ 0800 87 5465
E-mail: support@tp-link.com.au
Service time: 24hrs, 7 days a week
 - Italy**
Tel: +39 0230519020
E-mail: support.it@tp-link.com
Service time: Monday to Friday 9:00 AM to 1:00 PM, 2:00PM to 1:00 PM
 - Indonesia**
Tel: (+62) 021 6259 135
E-mail: support.id@tp-link.com
Service time: Monday to Friday 9:00 - 12:00; 13:00 - 18:00
*Except public holidays
 - Malaysia**
Tel: 1300 88 875465 (1300 88TPLINK)
Email: support.my@tp-link.com
Service time: 24hrs, 7 days a week
 - Poland**
Tel: +48 (0) 801 080 618 / +48 22 7217563
(if calls from mobile phone)
E-mail: support.pl@tp-link.com
Service time: 9:00 AM to 5:00 PM, GMT+1 or GMT+2 (Daylight Saving Time)
 - Germany / Austria**
Tel: +49 1805 875465 (German Service)
+49 1805 TPLINK
E-mail: support.de@tp-link.com
Fee: 0.14 EUR/min from the German fixed phone network and up to 0.42 EUR/min from mobile phone
Service time: Monday to Friday 9:00 AM to 6:00 PM, GMT+1 or GMT+2 (Daylight Saving Time in Germany)
*Except bank holidays in Hesse
 - Switzerland**
Tel: +41 (0) 848 800998 (German Service)
E-mail: support.ch@tp-link.com
Fee: 4-8 Rp/min, depending on rate of different time
Service time: Monday to Friday 9:00 AM to 6:00 PM, GMT+1 or GMT+2 (Daylight Saving Time)
 - Russian Federation**
Tel: 8 (499) 754-55-60
8 (800) 250-55-60 (toll-free call from any RF region)
E-mail: support.ru@tp-link.com
Service time: From 10:00 to 18:00 (Moscow time)
*Except weekends and holidays in Russian Federation
 - France**
Tel: +33 (0) 820 800 860 (French service)
Email: support.fr@tp-link.com
Fee: 0.118 EUR/min from France
Service time: Monday to Friday 9:00 AM to 6:00 PM (Except French Bank holidays)